

Multimedia Instructions

Quickstart Guide:

1. Touch the screen to activate it. Once the panel is active, touch 'Press here to begin.'
2. Select a source (*PC, Laptop, Doc Cam, DVD/VCR, etc.*).
3. Select a desired projection display (*Left and/or Right Projector*).
* Controls for each source, if available, will appear in the center of the touch screen.

System Startup:

Touching the panel activates the touch screen. Once the panel is active, enter the security password (provided by UCR-Media) to start the system.

Source/Input Selection:

The buttons on the left side of the touch screen designate the input that is being sent to the projectors. Specific instructions for each of the possible inputs is listed below:

- **Computer Projection**
 - For Laptop, press the LAPTOP button and connect video & audio cables (located in drawer).
 - For the in-room PC, press the PC button and turn on the computer.
 - On the touch panel, select the destination for the projection (*Left or Right*).
- **DVD or Video Playback**
 - Press the VCR or DVD button located on the left side of the touch screen.
 - On the touch panel, select the destination for the projection (*Left or Right*).
 - Control the VCR or DVD using the touch panel controls. There are two screens of controls for the DVD. The second screen can be accessed by pressing *More*, which appears in upper right hand corner of the touch screen when DVD is pressed.



- **Document Camera**
 - Press the DOC CAM button located on the left side of the touch screen.
 - Open the document camera drawer or cabinet.
 - Turn on the document camera and swing lens into position (if necessary).
 - On the touch panel, select the destination for the projection (*Left or Right*).

Volume Controls

- Use the VOL ▲ and the VOL ▼ buttons to control volume levels. VOL MUTE mutes system audio.

Help Button

- Press the HELP button for multimedia emergencies.

System Shutdown

- Press the SYSTEM OFF button to turn off the projectors.
- Confirm that the system should be shut down by pressing "Yes" on the touch screen.