



### Quickstart Guide:

1. Touch the screen to activate it. Once the screen is active, touch 'Press here to begin.'
2. Select a source (*PC, Laptop, Doc Cam, AUX, etc.*).\*
3. Select a desired projection display (*Left and/or Right Projector*).  
\* Controls for each source, if available, will appear in the center of the touch screen.

### Source/Input Selection:

The buttons to the right of the touch screen control which source is being sent to the projectors. Specific instructions for each source are listed below:

- **Computer Projection**
  - For the in-room PC, press the *PC* button. For Laptop use, connect the video & audio cables (located on the top/right side of the podium) and press the *Laptop* button. If necessary, switch the laptop output to mirror displays (usually *Fn + F8*).

- **Blu-ray Player or DVD/VHS Combination Deck**

*A Blu-ray player or DVD/VCR Combo deck can be installed upon request and must be requested prior to your class.*

- Press the power button on the Blu-Ray or DVD/VHS Combo deck (⏻)
- Press the *AUX* button on the control panel.
- Select *Blu-ray or DVD/VCR* on the touch screen.
- Control the DVD, VCR and Blu-ray player using the remote control provided by Multimedia Technologies.

### Volume Controls

There are separate controls for microphone volume and program audio volume.

- Microphone volume is controlled by pressing the microphone icon located in the upper-right hand corner of the touch screen
- Program audio is controlled by the knob located on the right side of the control panel.

### Help Button

- Press the 'Help' button for multimedia emergencies.

### System Shutdown

- Press the 'Display Off' button to turn off the projectors.
- Confirm that the system should be shut down by pressing 'Yes' on the touch screen